

*simply*

# Installing Burglar Guards



Installing a burglar guard is a simple task. Read these basic, simple instructions and go about making your home as secure as can possibly be.

**Xpanda****TOOLS REQUIRED**

Tape Measure  
Square  
Screwdriver  
Drill  
Wood and Steel Bits  
Pencil


**Building made simple!**

simply

# Installing Burglar Bars

## 1. MEASURE THE WINDOW FRAME OPENING OF YOUR WINDOW.

Do not measure the window itself. Instead, measure between the inside edges of the frame of the window. To measure accurately, open the window completely. To get the correct measurements, measure :

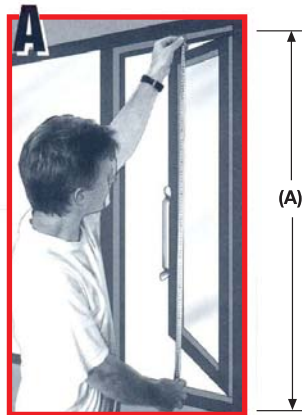

From the inside top to the inside bottom of the frame - The height (A)



From the inside left to the inside right of the frame - The width (B)

For TOP HUNG WINDOWS, simply reverse the measurements ie. use the height as the width and the width as the height.

## 2. DO YOU HAVE WOOD OR STEEL FRAMED WINDOWS?

Select the correct burglar guards according to the header cards that are clearly marked WOOD or STEEL.

### For WOODEN frames

DAYLIGHT WIDTH (mm) left to right	DAYLIGHT HEIGHT (mm) top to bottom	SIZE OF BURGLAR GUARDS REQUIRED	NO. OF BURGLAR GUARDS REQUIRED
480 - 510mm	200 - 400mm	530 - 160mm	
480 - 510mm	450 - 670mm	530 - 450mm	
480 - 510mm	700 - 950mm	530 - 700mm	
480 - 510mm	1000 - 1250mm	530 - 1000mm	
480 - 510mm	1300 - 1550mm	530 - 1270mm	
900 - 1030mm (Cape 1020 - 1060mm)	200 - 400mm	1060 - 160mm (Cape 1090 - 106mm)	
890 - 920mm	450 - 650mm	950 - 410mm	
790 - 825mm	450 - 650mm	845 - 410mm	
440 - 470mm	500 - 590mm	475 - 410mm	
500 - 550mm	500 - 590mm	565 - 410mm	
840 - 860mm	450 - 650mm	885 - 410mm	

### For STEEL frames

DAYLIGHT WIDTH (mm) left to right	DAYLIGHT HEIGHT (mm) top to bottom	SIZE OF BURGLAR GUARDS REQUIRED	NO. OF BURGLAR GUARDS REQUIRED
440mm	275mm	460 - 160mm	
440mm	565mm	460 - 410mm	
440mm	860mm	460 - 700mm	
440mm	1155mm	460 - 1000mm	
440mm	1445mm	460 - 1270mm	
940mm	275mm	950 - 160mm	
1425mm	275mm	1440 - 160mm	
940mm	565mm	950 - 410mm	

**SHOULD YOU HAVE ANY FURTHER QUESTIONS, PLEASE DO NOT HESITATE TO CONTACT YOUR LOCAL BUILD IT STORE.**

## 3. FIXING

Make sure guard is square in frame before fixing. Use one-way security screws.

### REGIONAL OFFICES

**KWAZULU NATAL** 031 508 5000   **EASTERN CAPE** 041 404 5000   **WESTERN CAPE** 021 550 7300   **N A M I B I A** 09264 61 214201  
**SWAZILAND** 031 753 6800   **SOUTH RAND** 011 821 4000   **NORTH RAND** 011 203 5300   **LOWVELD** 013 753 6800

© 2006 BUILD IT

E & O. E.